 



Display Alphabet Characters




FRONT PANEL

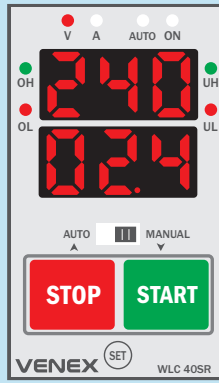


WLC 40SR

OPERATING MANUAL


STARTING MENU

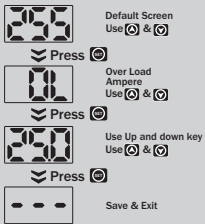

TIME PARAMETER

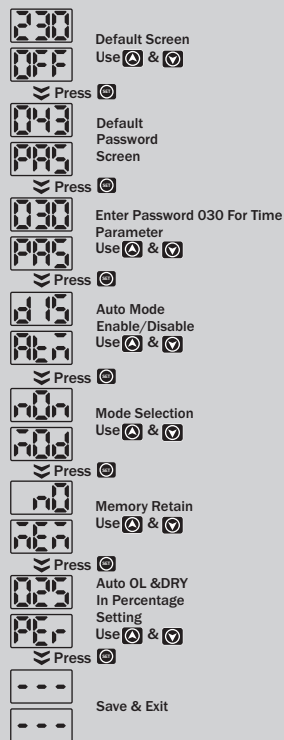

AMPERE PARAMETER

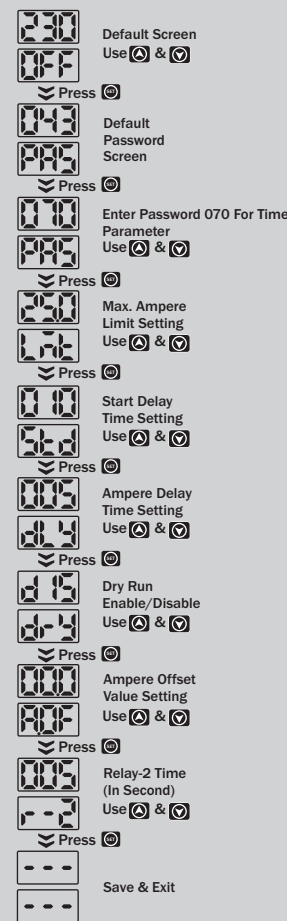

VOLTAGE PARAMETER

