

EARTH LEAKAGE PANEL



EP 100TP	100 AMPERE 3 POLE ELR PANEL, L&T MAKE MCCB (Dy125 U 10 KA), PANEL SIZE: (H:545XW:325XD:140)
EP 100FP	100 AMPERE 4 POLE ELR PANEL, L&T MAKE MCCB (Dy125 U 10 KA), PANEL SIZE: (H:545XW:325XD:140)
EP 125TP	125 AMPERE 3 POLE ELR PANEL, L&T MAKE MCCB (Dy125 U 10 KA), PANEL SIZE: (H:545XW:325XD:140)
EP 125FP	125 AMPERE 4 POLE ELR PANEL, L&T MAKE MCCB (Dy125 U 10 KA), PANEL SIZE: (H:545XW:325XD:140)
EP 160TP	160 AMPERE 3 POLE ELR PANEL, L&T MAKE MCCB (Dy250 U 10 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 160FP	160 AMPERE 4 POLE ELR PANEL, L&T MAKE MCCB (Dy250 U 10 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 200TP	200 AMPERE 3 POLE ELR PANEL, L&T MAKE MCCB (Dy250 U 10 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 200FP	200 AMPERE 4 POLE ELR PANEL, L&T MAKE MCCB (Dy250 U 10 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 250TP	250 AMPERE 3 POLE ELR PANEL, L&T MAKE MCCB (Dy250 U 10 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 250FP	250 AMPERE 4 POLE ELR PANEL, L&T MAKE MCCB (Dy250 U 10 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 320TP	320 AMPERE 3 POLE ELR PANEL, L&T MAKE MCCB (Dy400 U 50 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 320FP	320 AMPERE 4 POLE ELR PANEL, L&T MAKE MCCB (Dy400 U 50 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 400TP	400 AMPERE 3 POLE ELR PANEL, L&T MAKE MCCB (Dy400 U 50 KA), PANEL SIZE: (H:670XW:350XD:170)
EP 400FP	400 AMPERE 4 POLE ELR PANEL, L&T MAKE MCCB (Dy400 U 50 KA), PANEL SIZE: (H:670XW:350XD:170)