 


Display Alphabet Characters



FRONT PANEL



OPERATING MANUAL

STARTING MENU

- Default Screen Use (A) & (V)
- Press (V)
- Over Load Ampere Use (A) & (V)
- Press (V)
- Use Up and down key Use (A) & (V)
- Press (V)
- Save & Exit

TIME PARAMETER

- Default Screen Use (A) & (V)
- Press (V)
- Default Password Screen
- Press (V)
- Enter Password 030 For Time Parameter Use (A) & (V)
- Press (V)
- Auto Mode Enable/Disable Use (A) & (V)
- Press (V)
- Mode Selection Use (A) & (V)
- Press (V)
- Memory Retain Use (A) & (V)
- Press (V)
- Auto OL & DRY In Percentage Setting Use (A) & (V)
- Press (V)
- Save & Exit
-

AMPERE PARAMETER

- Default Screen Use (A) & (V)
- Press (V)
- Default Password Screen
- Press (V)
- Enter Password 070 For Time Parameter Use (A) & (V)
- Press (V)
- Max. Ampere Limit Setting Use (A) & (V)
- Press (V)
- Start Delay Time Setting Use (A) & (V)
- Press (V)
- Ampere Delay Time Setting Use (A) & (V)
- Press (V)
- Dry Run Enable/Disable Use (A) & (V)
- Press (V)
- Ampere Offset Value Setting Use (A) & (V)
- Press (V)
- Relay-2 Time (In Second) Use (A) & (V)
- Press (V)
- Save & Exit
-

VOLTAGE PARAMETER

- Default Screen Use (A) & (V)
- Press (V)
- Default Password Screen
- Press (V)
- Enter Password 090 For Time Parameter Use (A) & (V)
- Press (V)
- High Voltage Enable/Disable Use (A) & (V)
- Press (V)
- Low Voltage Enable/Disable Use (A) & (V)
- Press (V)
- Voltage Delay Time Setting Use (A) & (V)
- Press (V)
- Voltage Offset Value Setting Use (A) & (V)
- Press (V)
- Save & Exit
-

- Password
- Auto Mode
- Mode Selection
- Function Disable
- Delay Time

- High Voltage
- Limit For Ampere Setting
- Start Delay Time (Initial Delay)
- Ampere Offset Value
- Low Voltage

- Voltage Offset
- None Mode
- Relay-2 Time
- Percentage Setting