

This section gives you all the information necessary to help you monitor and operate your controller including an Operator Interface overview, an explanation of the Displays, keys, LEDs, Mode access, and Operation Modes.

 


KEY OPERATION:							
Keys	Functions						
TEST	To Test Relay Working Function						
RST	To Reset The Relay Contact manually after Tripping						
SET	To View & Edit Parameter And to be set Value And Move To The next Step						
ENT							
	To Increment Parameter Value + Voltage Scrolling						
$\checkmark$	To Decrement Parameter Value + Voltage Scrolling						

SPECIFICATION : Volt Input Electrical Connection Measurements	10 to 350 VAC (L-N); 15 to 650 VAC (L-L). 1Φ - 2 Wire, 3Φ - 3 Wire, 3Φ - 4 Wire Earth Leakage Current Monitoring (via External CBCT)
OUTPUT Relay	1CO, 7 Amp., 230 VAC ( NO - C - NC )
AUX Accuracy Operating Temp Relative Humidity Enclosure Material	


## **PRECAUTIONS WHEN WIRING**


- Separate input leads and power lines in order to prevent external noise.
- Use specified size (M3.5, width 7.2 mm or less) crimped terminals for wiring. To connect bare wires to the terminal block, use copper braided or solid wires with a rated temperature of over 70 °C and a gauge of AWG24 to AWG14 (equal to a cross-sectional area of 0.205 to 2.081 mm2). (The stripping length is 5 to 6 mm.) Up to two wires of same size and type, or two crimped terminals can be inserted into a single terminal.
- Use crimp terminals when wiring the terminals.
- Use the suitable wiring material and crimp tools for crimp terminals.
- Tighten the terminal screws to between 0.74 and 0.90 N-m.
- Use the following types of crimp terminals for M3.5 screws.



## MOUNTING

The controller can be mounted on either a vertical or tilted panel using the mounting bracket supplied. Adequate access space must be available at the back of the panel for installation and servicing activities. Overall dimensions and panel cutout requirements for mounting the controller are shown in Figure

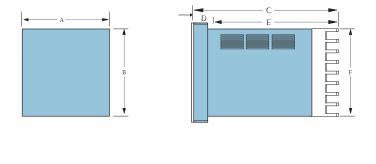

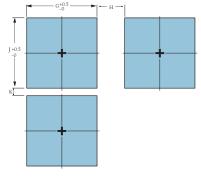

Size	А	В	С	D	E	F	G	H(Min)	J	K(Min)
(72*72)	72	72	88	3	85	65	68	25	68	25



For more information, please contact your local V∈N∈× Representative, Or write to admin@vbtron.com ⊕ www.vbtronautomation.com | Contact Us : +91 91066 12070 | 97257 29668