

This section gives you all the information necessary to help you monitor and operate your controller including an Operator Interface overview, an explanation of the Displays, keys, LEDs, Mode access, and Operation Modes.



KEY OPERATION:

Keys	Functions
	To View & Edit Parameter And to be set Value And Move To The next Step.
	To Increment Parameter Value + STOP.
	To Decrement Parameter Value + START.
	Auto Or Manual Mode Selection.


SPECIFICATION

<div>INPUT</div>	<div>Volt Input</div> <div>CT Input</div> <div>DT Input (Optional)</div>	<div>R, Y, B, Three Phase (290 VAC ~ 490 VAC)</div> <div>50 Ampere CT @ 3 NOs (1.0 AMP ~ 50.0 AMP)</div> <div>Start Input, Stop Input</div>
<div>OUTPUT</div>	<div>Relay</div>	<div>3 CO, 40 Amp., 415 VAC</div>
<div>AUX.</div> <div>Accuracy</div> <div>Operating Temp.</div> <div>Relative Humidity</div> <div>Enclosure Material</div>	<div>415 VAC, 50 Hz, ± 10%</div> <div>± 1% of FSD</div> <div>0 °C ~ 55 °C</div> <div>Up to 95% RH Non Condensing</div> <div>ABS Plastic</div>	

Display Alphabet Characters

A _A	b _B	C _C	d _D	E _E	F _F	G _G	h _H	I _I	J _J	K _K	L _L	M _M	N _N	O _O	P _P	Q _Q	r _R	S _S	t _T	u _U	V _V	w _W	X _X	Y _Y	Z _Z
----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------	----------------

STARTING MENU

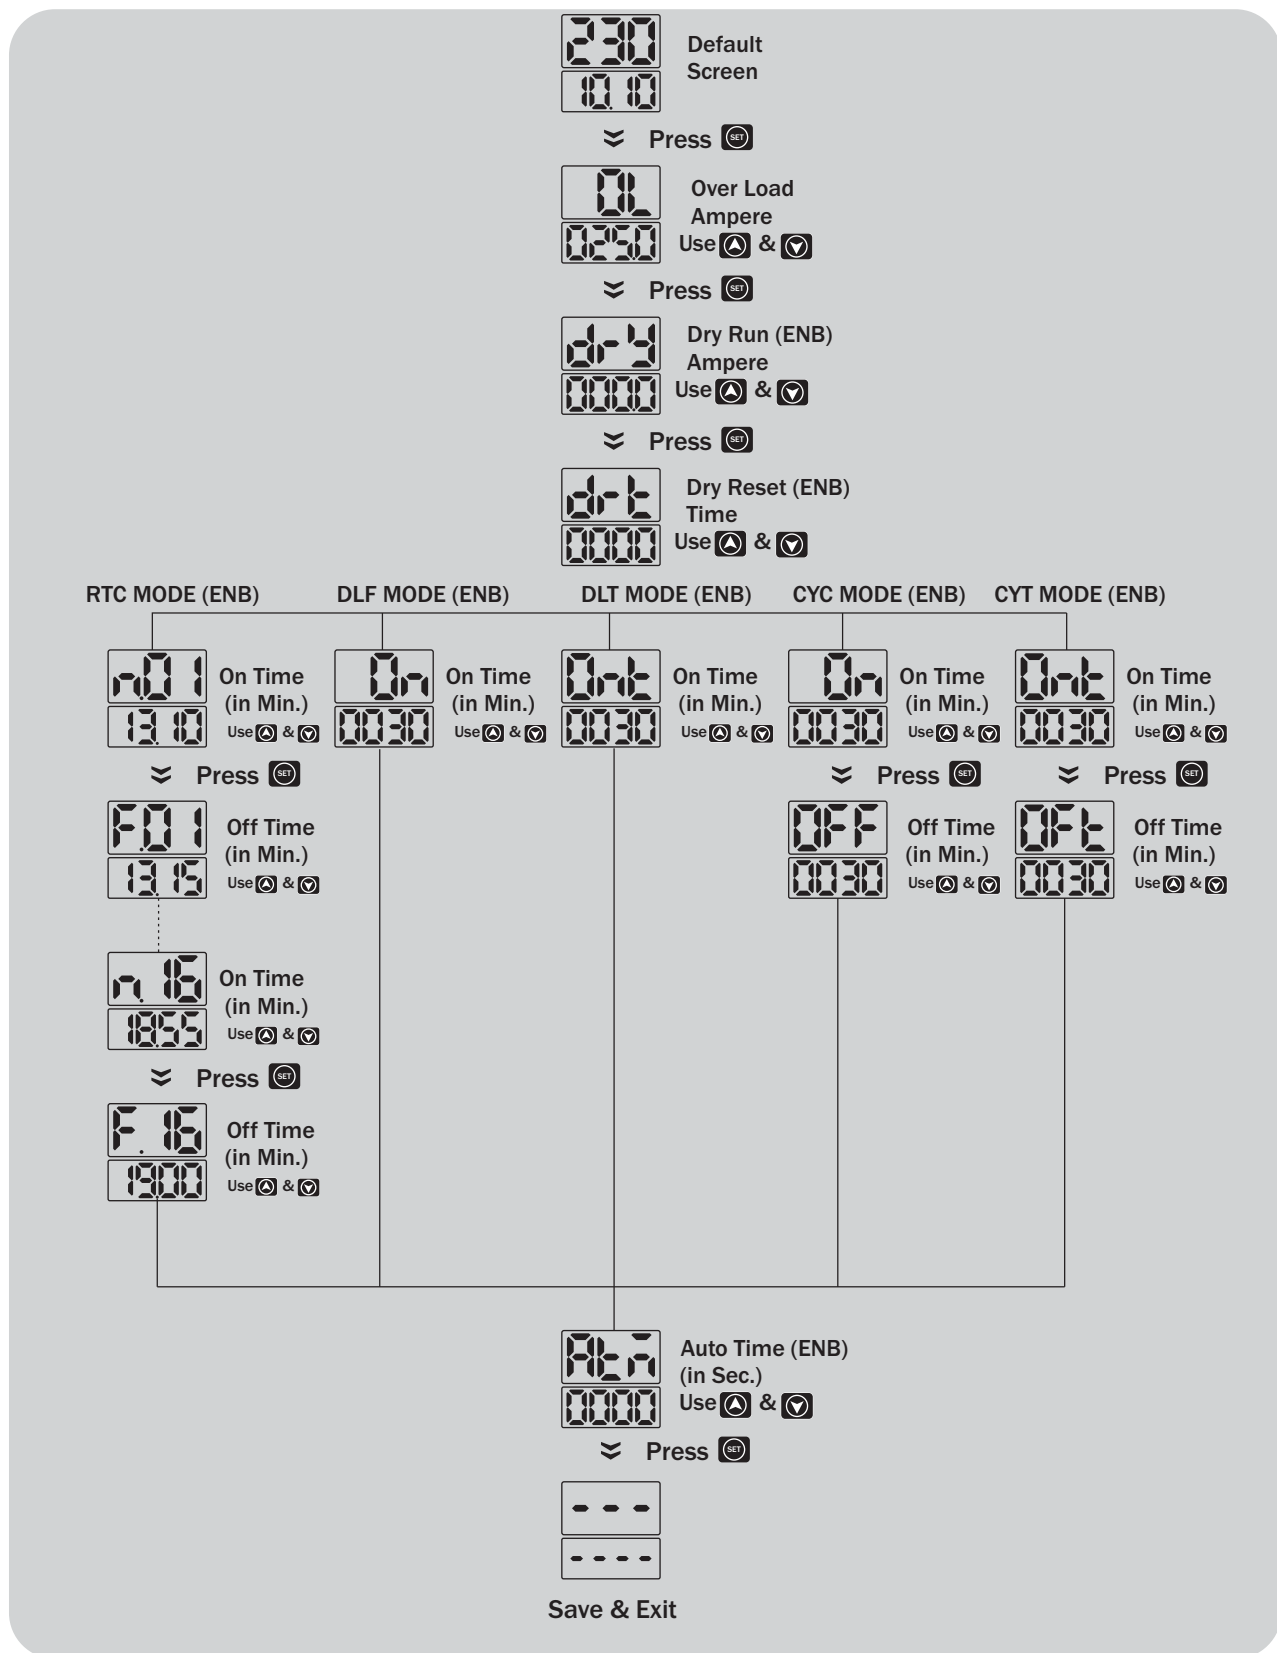

PARAMETER SETTING

PRESS  For 5 Sec.

PASS 30

 Default Screen

Press 

 Default Screen

Press 

 Enter Password 030 For Time Parameter Use  & 

Press 

 Auto Delay Time Enable/Disable Use  & 

Press 

If RTC Mode
 Mode Selection Use  & 


Press 

 Memory Retain Use  & 

Press 


 Auto OL & DRY In Percentage Setting Use  & 

Press 

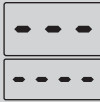

Save & Exit

PASS 50

 Default Screen

Press 

 Default Screen

Press 

 Enter Password 050 For Time Parameter Use  & 

Press 

 Clock Time In Sec Use  & 

Press 

 Clock Time In Minutes Use  & 


Press 

 Clock Time In Hours Use  & 

Press 

 Days Setting Use  & 

Press 

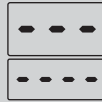

Save & Exit

PASS 70

 Default Screen

Press 

 Default Screen

Press 

 Enter Password 070 For Time Parameter Use  & 

Press 

 Max. Ampere Limit Setting Use  & 

Press 

 Start Delay Time Setting Use  & 

Press 

 Ampere Delay Time Setting Use  & 

Press 

 Dry Run Enable/Disable Use  & 

Press 

 Dry Run Reset Enable/Disable Use  & 

Press 

 Ampere Offset Value Setting Use  & 

Press 



Save & Exit

PASS 80

 Default Screen

Press 


 Default Screen

Press 

 Enter Password 080 For Time Parameter Use  & 

Press 

 Working Days Selection Use  & 

Press 

 Working Days Selection Use  & 

Press 




Save & Exit

 Voltage Difference For Phase Lose Use  & 

Press 

 Voltage Offset Value Setting Use  & 

Press 

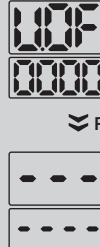

Save & Exit

PASS 90

 Default Screen

Press 


 Default Screen

Press 


 Enter Password 090 For Time Parameter Use  & 

Press 

 SPP Function Enable/Disable Use  & 

Press 

 Phase Sequence Enable/Disable Use  & 



Press 

 High Voltage Enable/Disable Use  & 

Press 

 High Voltage Use  & 

Press 
























 Low Voltage Enable/Disable Use  & 

Press 

 Low Voltage Use  & 

Press 

 Voltage Delay Time Setting Use  & 

	Password		High Voltage Function		Real Time Mode		Phase Sequence Function
	Enable Function		Limit For Ampere Setting		None Mode		Difference Value
	Auto Delay Time		Start Delay Time (Initial Delay)		Cyclic Mode		SPP Function (Phase Loss)
	Mode Selection		Dry Reset Time		Cyclic With Trigger Mode		
	Function Disable		Ampere Offset Value		Delay Off With Trigger Mode		
	Function Yes		Low Voltage Function		Delay Off Mode		
	Delay Time		Voltage Offset				

Warranty and Application Considerations

Read and Understand This Catalog

Please read and understand this catalog before purchasing the products. Please consult your venex representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

(12 Months, unless agreed otherwise by us) We undertake to replace or repair at our option any defective product that needs replacement or repair, by reason of defective workmanship or defective materials, brought to our notice within the period specified below as "Warranty Period" after delivery to the buyer, providing also that it we so require, the part in respect of which a complaint is made must, before liability can be entertained under this clause, be sent at buyer's expense to our works or our office, as we may determine. Under no circumstances do we undertake liability for indirect or consequential loss or damage of any nature. This guarantee is given in lieu of and excludes every other condition or warranty whether statutory or otherwise.

LIMITATIONS OF LIABILITY

VAPL Shall Not Be Responsible For Special, Indirect, Or Consequential Damages, Loss Of Profits, Or Commercial Loss In Any Way Connected With The Products, Whether Such Claim Is Based On Contract, Warranty, Negligence, Or Strict Liability.

In no event shall the responsibility of VAPL for any act exceed the individual price of the product on which liability is asserted

In No Event Shall VAPL Be Responsible For Warranty, Repair, Or Other Claims Regarding The Products Unless VAPL's Analysis Confirms That The Products Were Properly Handled, Stored, Installed, And Maintained And Not Subject To Contamination, Abuse, Misuse, Or Inappropriate Modification Or Repair.

Application Considerations

SUITABILITY FOR USE

VAPL shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the products. Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

Never Use The Products For An Application Involving Serious Risk To Life Or Property Without Ensuring That The System As A Whole Has Been Designed To Address The Risks, And That The VAPL Products Are Properly Rated And Installed For The Intended Use Within The Overall Equipment Or System.

DISCLAIMERS

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of VAPL's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the VAPL Warranty and Limitations of Liability.

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your VAPL representative at any time to confirm actual specifications of purchased product.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

SAFETY PRECAUTIONS

Do not touch the terminals while power is being supplied.
Doing so may occasionally result in minor injury due to electric shock.



Do not allow pieces of metal, wire clippings, or fine metallic shavings or filings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.



Do not use the product where subject to flammable or explosive gas. Otherwise, minor injury from explosion may occasionally occur.



Never disassemble, modify, or repair the product or touch any of the internal parts. Minor electric shock, fire, or malfunction may occasionally occur



If the output relays are used past their life expectancy, contact fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions



Tighten the terminal screws to between 0.74 and 0.90 N·m. Loose screws may occasionally result in fire.



Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result in property damage or accidents.



A malfunction in the Temperature Controller may occasionally make control operations impossible or prevent alarm outputs, resulting in property damage. To maintain safety in the event of malfunction of the Temperature Controller, take appropriate safety measures, such as installing a monitoring device on a separate line.



VBTRON AUTOMATION PVT. LTD.

132, Vishala Industrial Estate,
Nr. Odhav Ring Road Circle,
Kathwada, Ahmedabad.
(GUJARAT) INDIA

Authorized Distributor :

© VBTRON AUTOMATION PVT. LTD. 2014
All Right Reserved. In the interest of
product improvement, specifications are
subject to change without notice.

PRECAUTIONS FOR SAFE USE

Be sure to observe the following precautions to prevent operation failure, malfunction, or adverse effects on the performance and functions of the product. Not doing so may occasionally result in unexpected events.

- The product is designed for indoor use only. Do not use the product outdoors or in any of the following locations.
 - Places directly subject to heat radiated from heating equipment.
 - Places subject to splashing liquid or oil atmosphere.
 - Places subject to direct sunlight.
 - Places subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).
 - Places subject to intense temperature change.
 - Places subject to icing and condensation.
 - Places subject to vibration and large shocks.
- Use/store within the rated temperature and humidity ranges.
Provide forced-cooling if required.
- To allow heat to escape, do not block the area around the product.
Do not block the ventilation holes on the product.
- Be sure to wire properly with correct polarity of terminals.
- Use specified size (M3.5, width 7.2 mm or less) crimped terminals for wiring. To connect bare wires to the terminal block, use copper braided or solid wires with a rated temperature of over 70 °C and a gauge of AWG24 to AWG14 (equal to a cross-sectional area of 0.205 to 2.081 mm²). (The stripping length is 5 to 6 mm.) Up to two wires of same size and type, or two crimped terminals can be inserted into a single terminal.
- Do not wire the terminals which are not used.
- Allow as much space as possible between the controller and devices that generate a powerful high-frequency or surge. Separate the high-voltage or large-current power lines from other lines, and avoid parallel or common wiring with the power lines when you are wiring to the terminals.
- Use this product within the rated load and power supply.
- Make sure that the rated voltage is attained within two seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not be reset or output malfunctions may occur. into consideration when performing control.
- Make sure that the Controller has 30 minutes or more to warm up after turning ON the power before starting actual control operations to ensure the correct temperature display.
- A switch or circuit breaker should be provided close to this unit. The switch or circuit breaker should be within easy reach of the operator, and must be marked as a disconnecting means for this unit.
- Do not use paint thinner or similar chemical to clean with. Use standard grade alcohol.
- Design system (control panel, etc) considering the 2 seconds of delay that the controller's output will be set after power ON.
- The output may turn OFF when shifting to certain levels. Take this into consideration when performing control.
- The number of non-volatile memory write operations is limited